




HANGING YOUR NEW DREAMTIME WALL MURAL

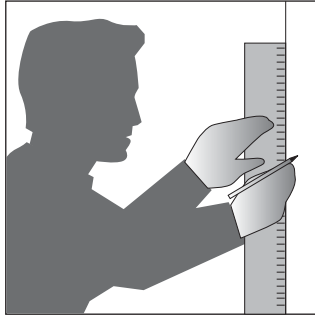


STEP 1

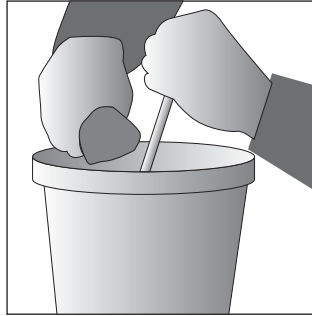


STEP 2

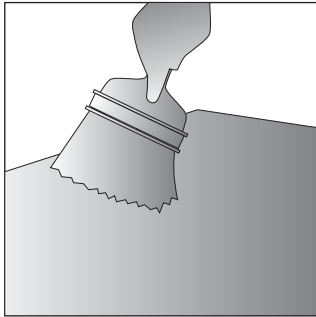


STEP 3

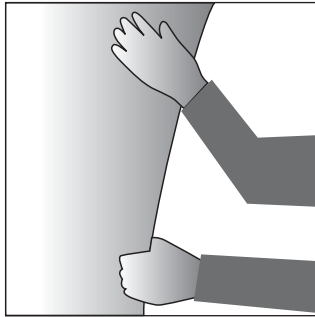


STEP 4

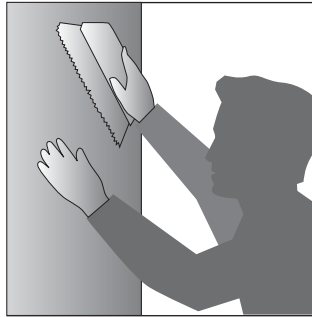


STEP 5

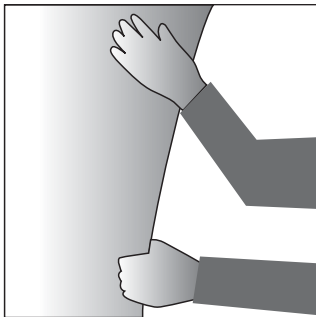

STEP 6

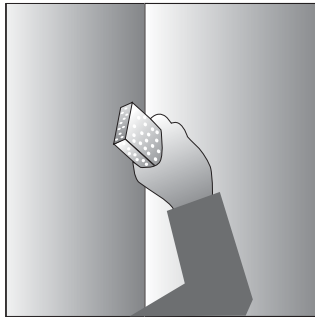

STEP 7

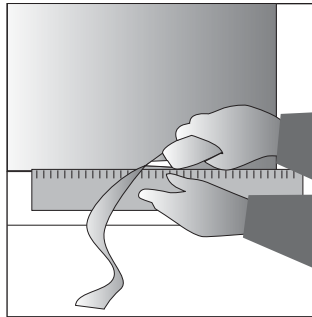

STEP 8

PLEASE READ THESE INSTRUCTIONS CAREFULLY

STEP 1. After you prepared your wall for wallpapering, begin by using a soft pencil to mark horizontal lines on your wall indicating the width and location of each mural panel. If your mural is the same size as your wall, you'll need to measure out from the left hand side of the wall. But if your mural is smaller than the wall, then find the center of your wall and mark outwards. This will allow you to view the position of your mural before wallpapering.

STEP 2. Mix the contents of the wallpaper adhesive with water in a bucket or container. Follow the wallpaper adhesive instructions on the pack for the adhesive to water ratio. The adhesive when ready should become a smooth, easy to apply paste.

STEP 3. Apply the paste to the first mural panel and spread generously working out towards the edges. Always avoid contact with the decorative surface. **Accidental splashes should be immediately wiped away with water and a clean, damp sponge.** Re-paste any dry edges or other areas before hanging. Give each panel a rest (book) time after applying the paste for expansion. Allow each panel equal time lengths to expand to the same size.

STEP 4. Starting from your left hand side and working outwards, position the first panel onto the wall, allowing 75mm (3 inches) top and 75mm (3 inches) bottom for trimming. For smaller murals, we recommend adding masking tape to the top and bottom of the wall to the height of the mural. This will help keep your wall free of paste when trimming, all you need to do is peel off the masking tape when finished.

STEP 5. Use a soft smoothing brush or soft rag to brush out all irregularities by smoothing out from the center to the edges. Because most bubbles and edge wrinkles will disappear when dry, there is no need to add too much pressure when smoothing. **DO NOT use a squeegee or any other stiff instrument as this will damage your mural.**

STEP 6. Apply the rest of the panels by repeating steps 3, 4 and 5. Overlap each panel with the previous panel by approximately 5mm (3/8"). This should give you the best results when completed.

STEP 7. When all the panels are positioned onto your wall, make sure to wipe away any residue paste with water and a clean damp sponge. **DO NOT scrub the mural. DO NOT use cleaning solvent.**

STEP 8. Use a straight edge ruler and a utility knife to trim the wall mural top and bottom for a clean finish.